

Charging & Status LEDs

GPS LED

Solid green - Indicates that your device is searching for the GPS signal. Once the GPS signal has been established, the LED light will start flashing.



Status LED

Flashing status LED light indicates that your tracker has power and is operational.

If this is the first time you are using your tracker, it may take a while to establish a GPS lock. Take your device for a quick drive to allow it to establish a GPS satellite fix. Check that both LED lights on the tracker are flashing. Ensure the device is installed with the logo side facing up as this is where the directional GPS receiver is located.

Wiring Diagram



1- RED (power): permanent live power. supports from 10vdc up to 30vdc

2- BLACK (gnd): ground/earth/chassis

3- Yellow- (din1): dedicated input for ignition detection. must be connected to the ignition wire or an accessory that receives power with the ignition.

4- WHITE&ORANGE (dout1): provides negative signal output when activated. can be used to control external devices using a relay. the relay must be used to convert the negative signal to positive (e.g. starter motor cut-off). digital output can be activated or deactivated remotely by using the "send command" section on gpslive.

5- GREY (ain1): measures exact live voltage of an external device. (e.g. generator / leisure battery)

Installation

We recommend the installation to be carried out by a professional auto electrician. The device should be connected to a permanent live feed.

If you only require location information, simply connect the RED - Power and BLACK - Ground cables only. The Input and output wires are optional.

The device should be installed with the logo side facing up as this is where the directional GPS receiver is located.



This way up

Do not install the device below thick metal surfaces as this will block the satellite signal. (e.g. inside the engine bay or the boot). Ideal installation places are under the front dashboard or behind the glove box.

Accessing your account


To access your account please visit: WWW.GPSLIVE.CO.UK or get our free to download app GPSLive on Google Play or Apple App Store.



If you have purchased this device with subscription, it will have already been added to your account. You'll receive your login details via email if you're a new user.

How do I manage my subscription?

Visit WWW.GPSLIVE.CO.UK, log in and follow the instructions below:

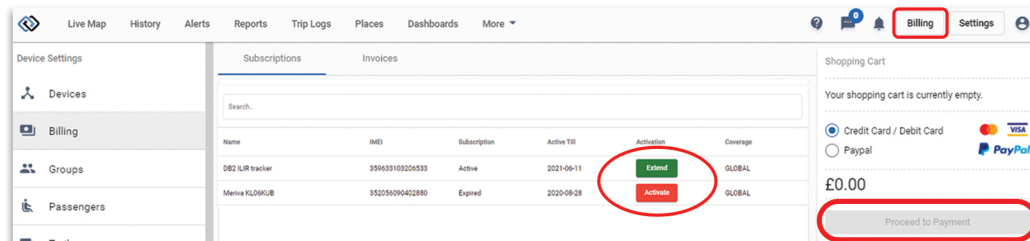

Click on Billing
In the top right corner

Click on Subscribe
on the device you wish to activate or extend

Proceed to the payment screen

IF YOUR SUBSCRIPTION RUNS OUT, YOUR VEHICLE WILL NOT BE PROTECTED AGAINST THEFT AND TRACKING WILL BE DISABLED DURING THIS PERIOD.

Ideal location for your tracker

