


Charging & Status LEDs

GPS LED

Flashing Blue - Indicates that your device is searching for a GPS signal. Once signal has been established, the LED light will become solid.

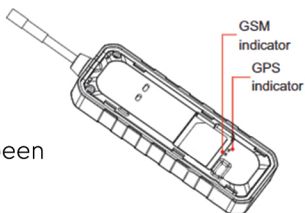


GSM LED

Flashing Green - Indicates that your device is searching for a GSM signal. Once signal has been established, the LED light will become solid.

If this is the first time you are using your tracker, it may take a while to establish a GPS fix. Take your device for a quick drive to allow it to establish a GPS satellite fix. Check that both LED lights on the tracker are flashing. Ensure the device is installed with the logo side facing up as this is where the directional GPS receiver is located.

Wiring Diagram

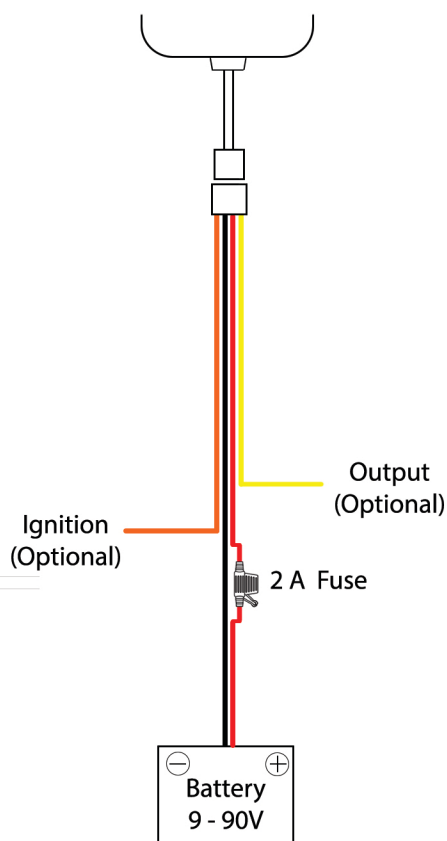

Installation

We recommend the installation to be carried out by a professional auto electrician. The device should be connected to a permanent live feed.

If you only require location information, simply connect the RED - Power and BLACK - Ground cables only. The ignition and output wires are optional.

The device should be installed with the logo side facing up as this is where the directional GPS receiver is located.




GPS Signal works off of line of sight and can travel through thin materials. When installing the device, you should check the number of GPS satellites that are picked up by the device displayed under device information on GPSTLive.

LOW 0 - 5, GOOD 6 - 9, BEST 10 - 14+

Accessing your account


To access your account please visit: WWW.GPSLIVE.CO.UK or get our free to download app GPSTLive on Google Play or Apple App Store.

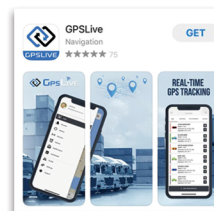

If you have purchased this device with subscription, it will have already been added to your account. You'll receive your login details via email if you're a new user.

How do I manage my subscription?

Visit WWW.GPSLIVE.CO.UK, log in and follow the instructions below:

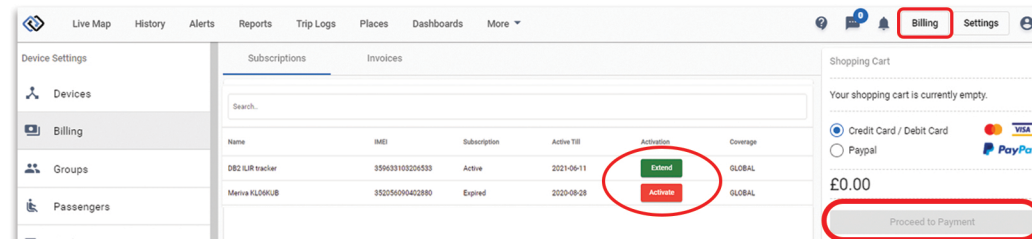

Click on Billing
In the top right
corner

Click on Subscribe
on the device you wish to
activate or extend

Proceed to the
payment
screen

IF YOUR SUBSCRIPTION RUNS OUT, YOUR VEHICLE WILL NOT BE PROTECTED AGAINST THEFT AND TRACKING WILL BE DISABLED DURING THIS PERIOD.

Ideal location for your tracker

Ideal location for the device would be the area of the battery pack as shown below

