

REWIRE SECURITY RX-5 BODY WORN CAMERA USER GUIDE





1 VIDEO KEY



2 PHOTO KEY 3 AUDIO KEY 4 POWER KEY

BASIC OPERATION

CHARGING

Please fully charge the camera before use. To charge the RX-5 connect the supplied mini USB cable to the side of the camera and then to either a computer or USB charging plug. The LED

status light on the camera will light up white while charging and go out once charged.

TURNING THE CAMERA ON/OFF

Press the **POWER** button on the side of the camera to turn the camera **ON** or **OFF**. Once turned on the camera will automatically go in standby mode.

RECORDING VIDEO

Press the **VIDEO KEY** to **START** or **STOP** recording video while in the standby mode.

SNAPSHOTS

Press the **PHOTO KEY** to take a still image while in standby mode or recording.

AUDIO ONLY

Press the **AUDIO** button to record audio only while in the standby mode.

FILE TAGGING

Press the **MENU/BACK** while recording video to tag and write protect the current file.

AUXILIARY LED ILLUMINATION

To activate or deactivate the RX-5's built in LED lights press and hold the **UP/LEFT KEY**.

BUILT-IN LASER POINTER

To activate or deactivate the RX-5's built in laser pointer tap the **UP/LEFT KEY**.

MEDIA PLAYBACK

To enter the media playback menu press the **OK/PLAYBACK** button while in standby mode.

Use the **UP/LEFT, DOWN/RIGHT** buttons to navigate through the menus press the **OK/PLAYBACK** button to confirm and the **MENU/BACK** buttons to go back and to exit back to standby mode.

CONFIGARATIONS MENU

To enter the settings menu press the **MENU/BACK** button while in standby mode. Once in the settings menu use the **UP/LEFT, DOWN/RIGHT** buttons to navigate through the menus press the **OK/PLAYBACK** button to confirm and the **MENU/BACK** buttons to go back and to exit back to standby mode.

The following settings can be configured from the three sub folders in the settings menu settings menu

VIDEO SETTINGS

RESOLUTION

1920X1080 30P 16:9

1280X720 60P 16:9

1280X720 30P 16:9

848X480 30P 16:9

QUALITY

SUPER FINE

FINE

NORMAL

PRE-RECORD

ON

OFF

*Once activated, press the **video button** once to activate the 20 second pre-record mode and once again to start recording with the 20 second buffer in place.*

DELAY RECORD

ON

OFF

*Once activated the camera will continue to record for 10 seconds after the **video button** is pressed to stop recording.*

STAMP

ON

OFF

MOTION

ON

OFF

SNAP SHOT SETTINGS

RESOLUTION

4m

6m

9m

13m

18m

QUALITY

SUPER FINE

FINE

NORMAL

MULTI CAPTURE

1

5

10

20

STAMP

ON

OFF

CAMERA SETTINGS

LANGUAGE

Set the language for the on screen menus on the camera.

FILE MODE

Set the way files are stored on the camera.

CARD VOLUME

Details on available and used memory on the camera.

RECORD MODE SETTINGS

AUTO RECORD

MANUAL RECORD

LOOP VIDEO

ON

OFF

TIME & DATE SETUP

YYYY/MM/DD HH:MM

DISPLAY SETTINGS

Adjust the screen brightness

AUTO POWER

OFF

3MIN

5Min

POWER SAVING

OFF

ON

ID SETTINGS

Set a unique 8 character ID for the camera

VERSION INFO

Current version of firmware install on the camera

CAMERAS LED LIGHT STATUS

	LED 1	LED 2
POWERED ON	OFF	STATIC GREEN
RECORDING VIDEO	OFF	FLASHING RED
STANDBY	OFF	OFF
CHARGING	WHITE STATIC	OFF
CHARGING COMPLETE	OFF	OFF
SNAP SHOTS	OFF	FLASHING GREEN
AUDIO ONLY	OFF	FLASHING YELLOW

Notes Of Use

- Avoid using the camera near strong magnetic field.
- Avoid shining light directly into the cameras lens.
- Misuse of the camera may cause loss of data.
- Between each use of the camera it is recommended that any recorded data is backed up to a computer.
- Avoid allowing the cameras battery to go completely flat. Always charge the camera before use or periods of storage.